








ASSEMBLY INSTRUCTIONS for OPUCORCOM


hardware list

- A  x20pcs
- B  x8pcs
- C  x8pcs
- D  x4pcs

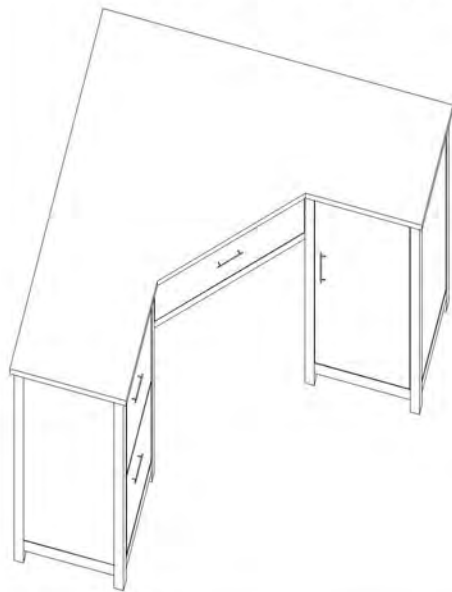



step 2.

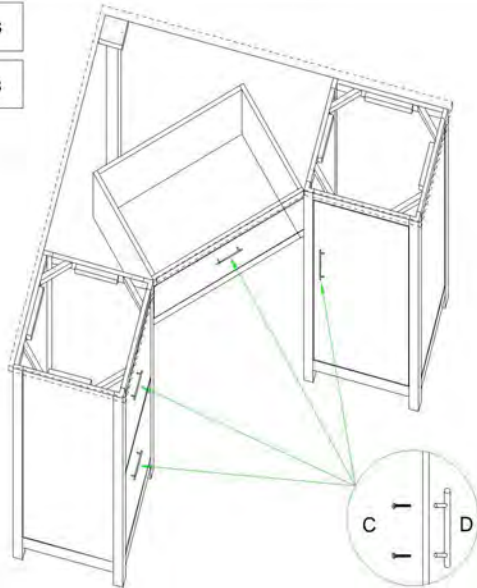
- C  x8pcs
- D  x4pcs



* Screw on first and tighten all the screws after step 2

step 1.

- A  x20pcs
- B  x8pcs

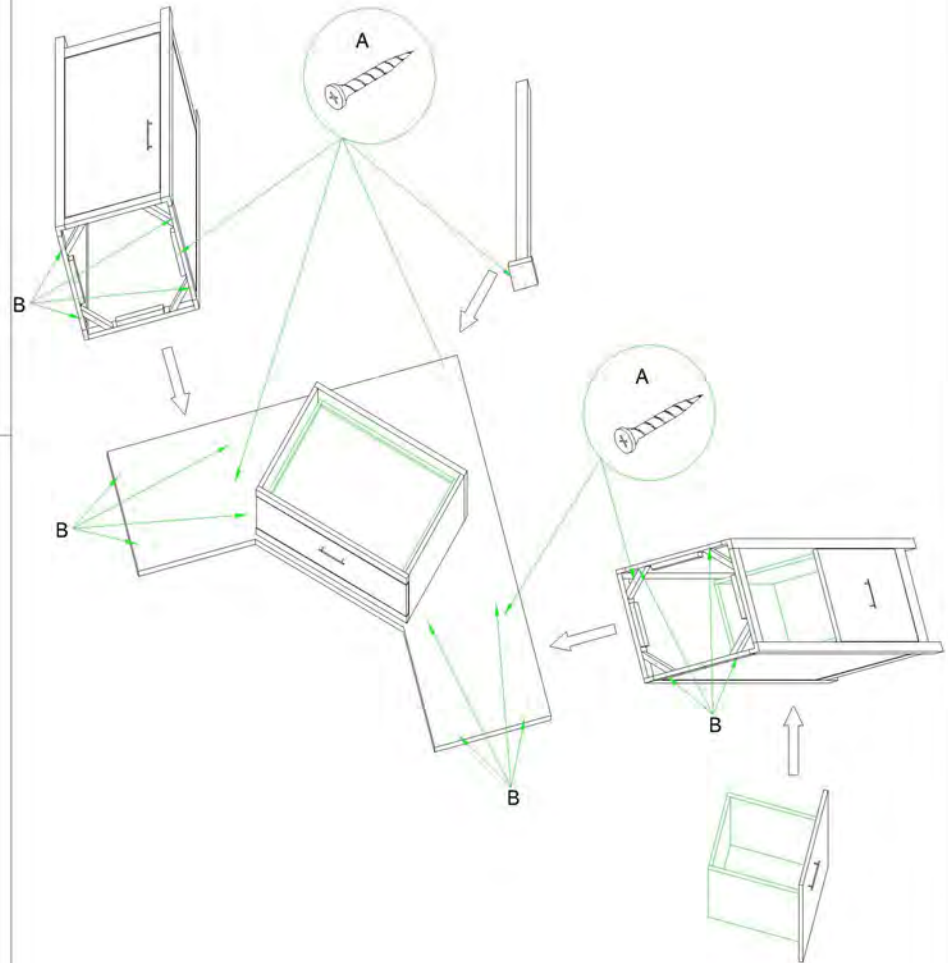

* Screw on first and tighten all the screws after step 1